

## How to check Firmware Version

### [IDSC21-E]

- (1) Set IDSC Jumper to ROM Rewrite Mode(See Firmware Rewrite Instruction for ROM Rewrite Mode Jumper Setting) you have no need to connect HDD.
- (2) Power ON PC, and wait until prompt(C:¥>)
- (3) Input 'cd idscfw' then press Enter.
- (4) Wait for prompt (C:¥IDSCFW>)and input 'idscver', then press Enter.
- (5) You can see Firmware Version on Monitor.
- (6) Turn OFF PC, and put back Jumper setting to Normal Mode State.

### [IDSC21F]

- (1) Set IDSC Jumper to ROM Rewrite Mode(See Firmware Rewrite Instruction for ROM Rewrite Mode Jumper Setting) **you need to connect HDD.**
- (2) Power ON PC, and wait until prompt(C:¥>)
- (3) Input 'cd idscfw' then press Enter.
- (4) Wait for prompt (C:¥IDSCFW>)and input 'idscver', then press Enter.
- (5) You can see Firmware Version on Monitor.
- (6) Turn OFF PC, and put back Jumper setting to Normal Mode State.